

Montgomeryville, PA (HQ)
 (267)-421-5300

Boston, MA
 (781)-951-5300

East Greenbush, NY
 (518)-541-5300

Columbia, MD
 (301)-709-5300

DeltaV Tools

Component Date for DeltaV


The Component Date for DeltaV displays the last modified date for all the components within a DeltaV export file (FHX). This application is used to increase quality by facilitating change control.

Type	Name	By	Last Modified Time Stamp
FUNCTION_BLOCK_DEFINITION	__43A85DD4_1E1491AE__	ADMINISTRATOR	20-Dec-2005 14:39:06
FUNCTION_BLOCK_TEMPLATE	AND	hawkbuild	21-Apr-2005 00:32:09
FUNCTION_BLOCK_TEMPLATE	BFI	hawkbuild	21-Apr-2005 00:32:09
FUNCTION_BLOCK_TEMPLATE	CND	hawkbuild	21-Apr-2005 00:32:10
FUNCTION_BLOCK_TEMPLATE	CALC	hawkbuild	21-Apr-2005 00:32:10
FUNCTION_BLOCK_DEFINITION	__43987EA9_23311E71__	ADMINISTRATOR	08-Dec-2005 13:42:50
FUNCTION_BLOCK_DEFINITION	__43C2741C_0EF76B0E__	ADMINISTRATOR	09-Jan-2006 09:33:00
FUNCTION_BLOCK_DEFINITION	__43A85DCE_1E147D54__	ADMINISTRATOR	20-Dec-2005 14:38:58
FUNCTION_BLOCK_DEFINITION	__43C2740C_0EF72E9D__	ADMINISTRATOR	10-Jan-2006 15:24:29
FUNCTION_BLOCK_DEFINITION	__43A85DD2_1E148CA9__	ADMINISTRATOR	20-Dec-2005 14:38:58
BATCH_EQUIPMENT_PHASE_CLASS	CAN_ADDITION	ADMINISTRATOR	13-Jan-2006 16:06:22

C:\Documents and Settings\joga.PANACEA2.001\Desktop\CAN_ADDITION.fhx


Component Viewer for DeltaV

Component Viewer for DeltaV allows the user to graphically view a DeltaV Export File (FHX File) on any computer. The user can export control libraries, areas, units, etc., to an FHX file and graphically view the configuration on any computer that is running Component Viewer for DeltaV. Component Viewer for DeltaV is similar to DeltaV Explorer but designed to be easier to use by providing more information in a single tool. Component Viewer for DeltaV is a read only application providing the security that FHX files cannot be altered while they are being reviewed.

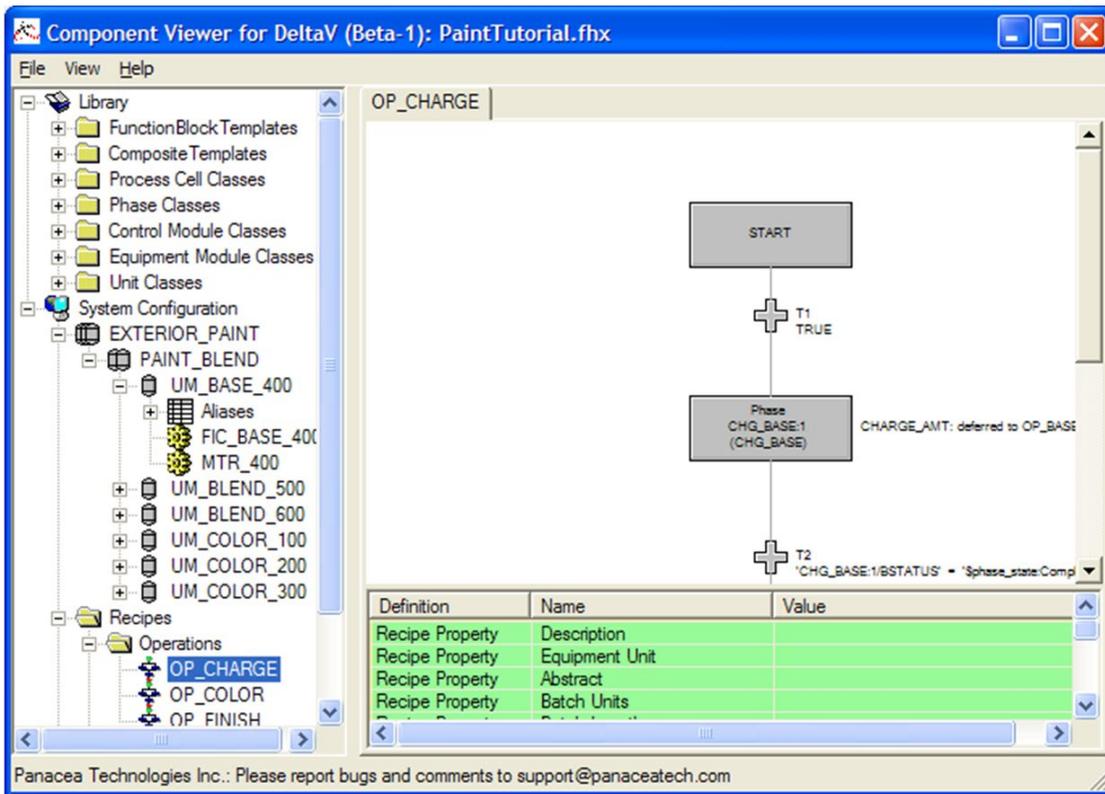


FHX File Compare for DeltaV

The FHX File Compare for DeltaV allows the user to compare two DeltaV configurations (via FHX export files) and shows in a simple side by side view the software that has been modified, added, or deleted between the two configurations. The FHX File Compare for DeltaV makes a determination on whether the changes are significant or insignificant based on predefined criteria. This application is used to increase quality by facilitating change control and reduces project costs by quickly determining changes without having to initiate a full review of the software.

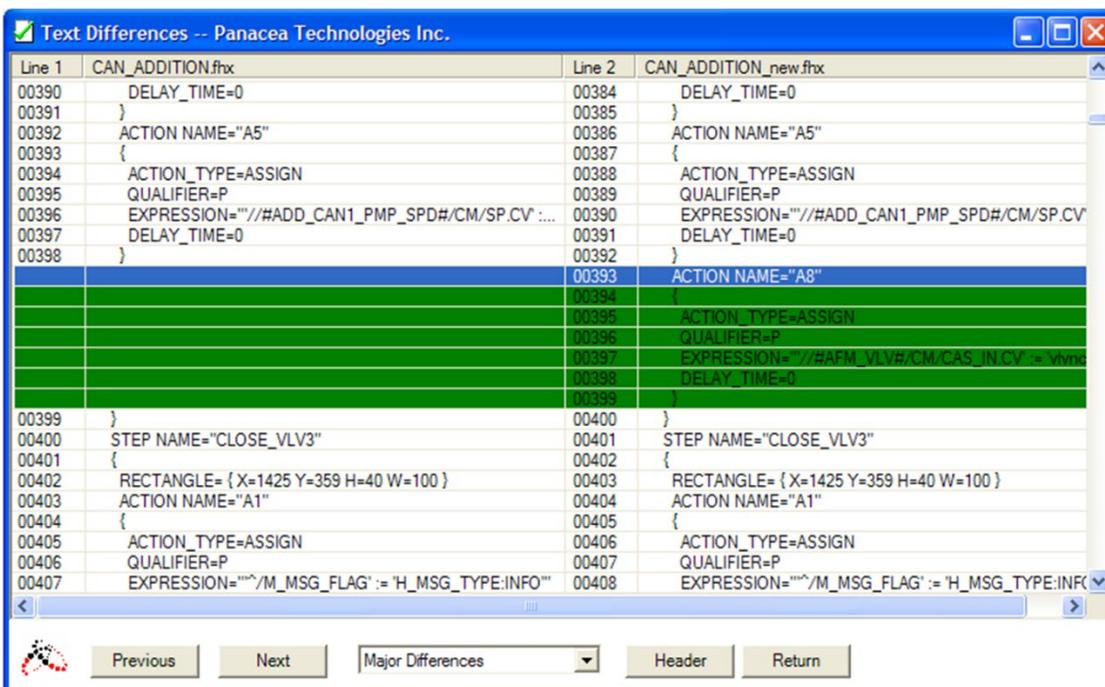

FHX File Explorer for DeltaV

FHX File Explorer for DeltaV allows the DeltaV Export file (FHX file) to be browsed in a tree structure similar to Microsoft's Explorer. This allows engineers to quickly access data in the DeltaV configuration offline without requiring the use of a DeltaV system.

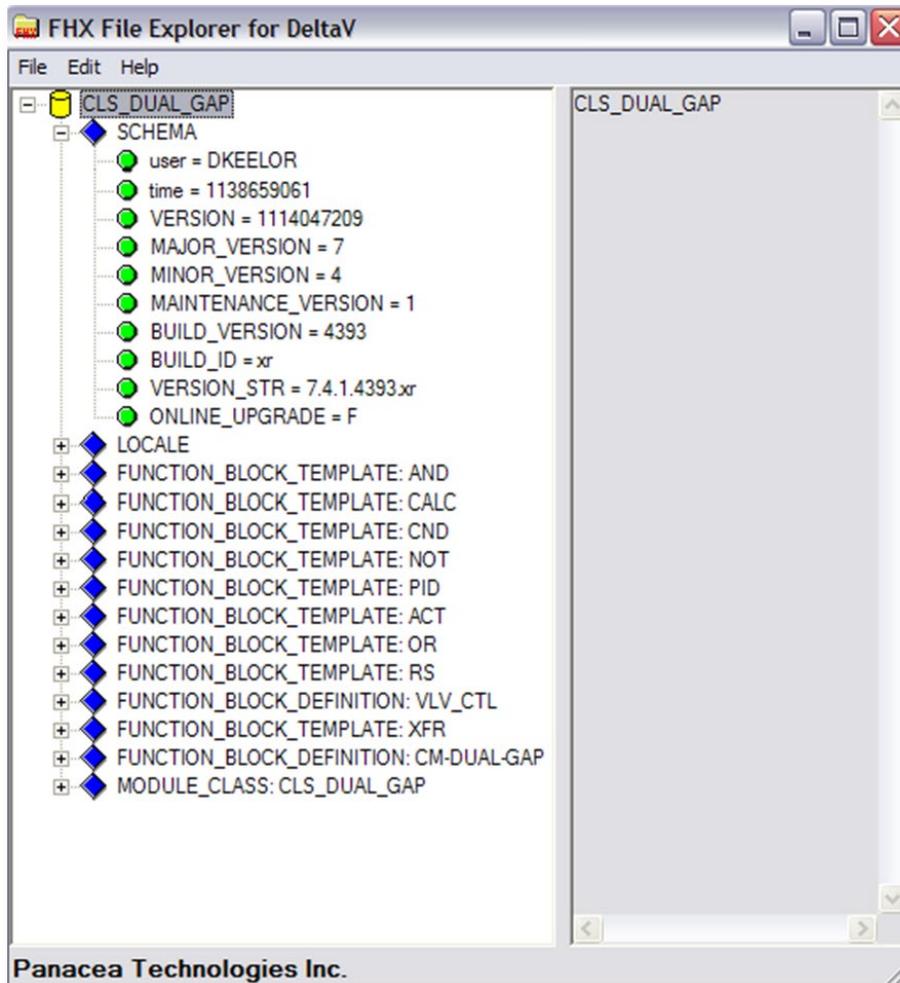

About Panacea Technologies

Panacea Technologies Inc. is a Process Control and Automation solutions company headquartered in Montgomeryville, PA with offices in East Greenbush, NY, Boston, MA, and Gaithersburg, MD. Panacea has been delivering cutting edge software solutions and services to our clients since 1996.

It is our mission at Panacea Technologies Inc. to provide our customers a competitive advantage by providing superior design, implementation, software, and management strategies to best leverage their automation and validation investments. Panacea Technologies' success is attributed to the confidence clients have in our technical know-how, diligence, and dependability.

Contact Panacea Technologies Headquarters at (267) 421-5300 or at sales@panaceatech.com to order or request an invitation to the next web demo, or to schedule a personalized product overview.